

BRIDLE LINES SHOULD BE REGULARLY CHECKED AND MAINTAINED IN THE CORRECT TRIM OR THE KITE WILL NOT PERFORM AS DESIGNED. IF THEY ARE WORN OR NOT TO FACTORY SPECIFICATION (+ OR - 20MM) THEY SHOULD BE REPLACED. REPLACEMENTS CAN BE ORDERED INDIVIDUALLY OR AS A FULL SET FROM YOUR SHOP/DEALER.


1. Open the kite out in a large space.
2. Inspect all bridle lines for wear/damage. Take note or label lines to be replaced.
3. Use a tape measure to measure the remaining bridles. Ask a friend to hold the end of the tape measure and bridle line in position to get an accurate measurement.
4. Pull on the line to add some tension and note each measurement.
5. Refer to the bridle line measurements sheet and rigging diagrams. Take note or label lines to be replaced.
6. Replace all bridle lines as necessary.

## BRIDLE LINE LENGTHS. ALL MEASUREMENTS IN MM

LINE NO.	4M	6M	8M	10M	12M	14M	16M
A1	700	860	1000	1120	1190	1300	1390
A2	460	560	650	730	780	850	910
A3	650	800	930	1040	1110	1200	1280
A4	380	470	550	610	650	710	760
A5	260	320	370	410	440	480	510
AL1	460	570	660	740	790	860	910
AL2	520	640	740	820	880	960	1020
AL3	480	590	690	770	820	890	950
KL	490	610	750	790	910	530	565
KL1	-	-	-	-	-	520	555
KL2	-	-	-	-	-	500	530
KL Bungee	490	580	640	770	800	865	1015

## CATALYST V5 RIGGING DIAGRAM

SIZES: 4/6/8/10/12M

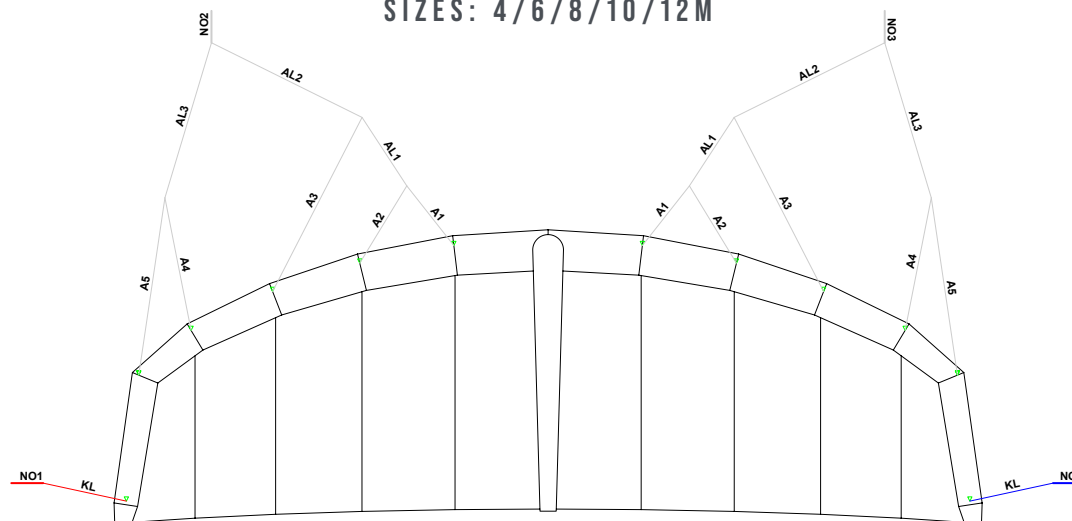

## CATALYST V5 RIGGING DIAGRAM

SIZES: 14/16M

